


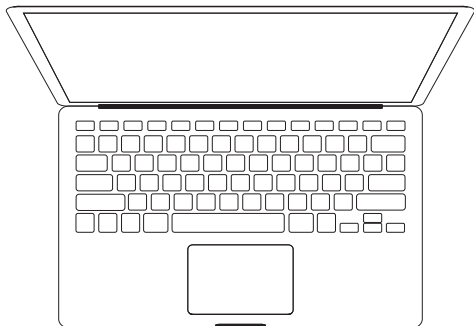

노트북


(Windows)

설명서




Windows 사용설명서 설정 가이드

이 설정 가이드는 Windows 시작, 시스템 언어, 시간대 설정, Wi-Fi 연결, 사용자 이름 및 장치 이름 설정을 도와줍니다.

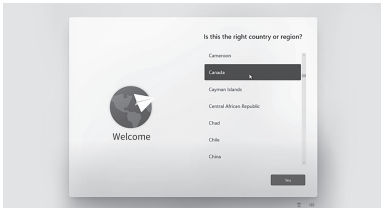

**인터넷 연결이 되면 Windows
는 자동으로 활성화 됩니다.**

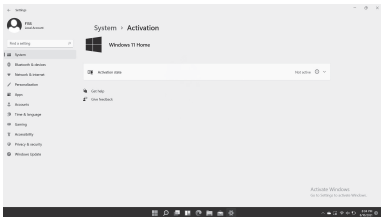

버튼 기능설명

- 전원 버튼 : 
 - 장치가 꺼져있을 때 전원 버튼을 3 초 동안 길게 눌러 장치를 켭니다..
 - 장치가 켜져있을 때 전원 버튼을 짧게 눌러 화면을 켜거나 끕니다.
 - 장치가 켜져있을 때 전원 버튼을 3 초 동안 길게 눌러 종료 인터페이스에 액세스하고 10 초 동안 길게 눌러 장치를 강제 종료합니다.
- 볼륨 + 버튼 : 누르면 볼륨이 증가합니다.. 
- 볼륨 - 버튼 : 누르면 볼륨이 감소합니다... 

상태표시 바

-  배터리 표시, 클릭하여 화면 밝기를 설정하고 절전 모드로 전환합니다. Windows는 절전 모드에서 화면 밝기를 자동으로 조정합니다.
-  Wi-Fi 표시, 클릭하여 Wi-Fi를 연결하거나 비행기 모드로 전환합니다. 비행 모드로 전환 시 Windows 는 자동으로 Wi-fi 연결을 해제합니다.
-  음량 표시, 클릭하여 음량을 조절합니다.
-  알림 센터, 클릭하여 알림을 확인하고 알림센터에 액세스 합니다. 자세한 내용은 관리센터 부분을 확인하세요.

가상 버튼 바



클릭하여 데스크톱으로 이동합니다..



클릭하여 전 화면으로 이동합니다..



클릭하여 로컬 및 인터넷 검색을 합니다.



클릭하여 백그라운드 앱으로 전환하거나 닫습니다.



클릭하여 시스템을 절전, 종료 또는 재부팅합니다.



클릭하여 설치된 모든 앱을 찾거나 엽니다.



클릭하여 계정 설정에 액세스하고 정기적으로 사용하는 앱을 볼 수 있습니다.

액션 센터



Tablet mode

클릭하여 태블릿 모드 ON/OFF



Rotation Lock

클릭하여 화면 회전잠금 ON/OFF.



Connect

클릭하여 무선 디스플레이 연결



All settings

클릭하여 설정화면 열기



Bluetooth

클릭하여 블루투스 ON/OFF



Location

클릭하여 GPS ON/OFF



VPN

클릭하여 VPN 설정



Note

클릭하여 OneNote 열기 (Microsoft 계정 로그인 필요)



Battery saver

클릭하여 전원절전 모드 ON/OFF



Brightness

클릭하여 화면 밝기 조정



Wi-Fi

클릭하여 WiFi ON/OFF



Airplane mode


클릭하여 비행기모드 ON/OFF

제스처 컨트롤


1. 화면 오른쪽에서 안쪽으로 스 와이프하여 알림 센터를 엽니 다.



2. 화면 왼쪽에서 안쪽으로 스와이프 하여 작업중인 앱을 볼 수 있습니다.

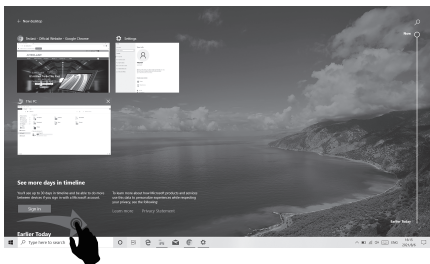

3. 앱을 전체 화면으로 이용 중 화면 상단에서 아래로 스 와이프하여
사용중인 앱의 제목을 표시합니다.

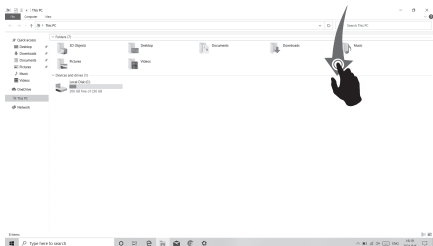

공장 초기화

사용자는 시스템이 불안정하거나 시스템 파일이 손상된 경우 공장 초기화를 수행 할 수 있습니다. 다음과 같은 방법으로이 기능에 액세스 할 수 있습니다. :

1. 설정 > 업데이트 및 보안을 선택합니다.
2. 복구 > 이PC 초기화 를 선택합니다.
3. 장치를 완전히 포맷하려면 모두 제거를 선택합니다..
4. 초기화를 클릭하여 시작합니다.

주의:

초기화 전에 장치를 전원에 연결하십시오. PC를 초기화하면 Windows가 다시 설치되지만 파일, 설정 및 앱은 삭제됩니다.

Charger Specifications

Ⓢ Charger specs should match the input voltage/current shown on the back of the product.

Ⓢ Please only use chargers that meets the above specification.

Ⓢ Please do a full recharge every 3 months if the product is going to stay unused for an extended period.

Ⓢ For first use after storage, the product may require a 30 minute charging session before charging status is indicated.

Table of hazardous substances contained in the product.

Component name	Hazardous substances					
	(Pb)	(Hg)	(Cd)	(Cr (VI))	(PBB)	(PBDE)
Device	✗	○	○	○	○	○
Digital player	○	○	○	○	○	○
The sheet is made according to SJ/T 11364. ○ : Means the content of this hazardous substances is under the limitation of GB/T 26572. ✗ : Means the content of this hazardous substances is over the limitation of GB/T 26572.						

Component	Hazardous Substances		
Device			
Accessories			

This table is proposed in accordance with the provision of SJ/T11364.

X: Indicate that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

O: Indicate that said hazardous substance in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

This series of products implement the national standard: GB 28380-2012

(Microcomputer Energy Efficiency Limit and Energy Efficiency Grade)

Guangzhou Shangke Information Technology Limited

Teclast official website: <http://www.teclast.com>

Technical support: aftersales@sk1999.com

Made In China

Scan the QR code for more information



Facebook Page



User Manuals

